Part 2-C) Installation with bolt-on Tsukayu brackets

1. Install the fairing bracket plates with the three holes near the forks, as shown as solid black holes in Fig. 2-C-3. The bolts for installing the brackets plates are come already on the fairing. Make sure you tighten the bolts on the brackets plates before you go to the next step. The other holes combination maybe useful if the front end of the motorcycle is not stock.

For Nomad 1600/ Vulcan 1600 Classic, there is no different between left and right bracket plates, the bracket plates should be installed directly on the fairing. (Fig. 2-C-1)

For Nomad 1500/ 1700/ Vulcan 1700 Classic/ LT/ 2000 Classic/ LT, left and right bracket plates are different, and you need to adjust the distance between the left and right plates until they match the distance of the mounting points on the forks by inserting spacers / washers provided in between the bracket plates and fairing. (Fig. 2-C-2)

2. After installing the bracket plates, check if all the bolts are tightened securely, then install the fairing on the bike. For Nomad 1600/ Vulcan 1600 classic, the bracket plates should be placed right next to the forks as shown in Fig. 2-C-4. For Nomad 1500/ 1700/ Vulcan 1700 Classic/ LT/ Vulcan 2000 Classic/ LT, the bracket plates is placed at the same position as the factory windshield, you may slide the fairing up and down to where it keep clear from the turn signals and low enough for looking good, you may slide to where it almost touching the top of the headlight. Tighten the bolts after adjustment.



Fig. 2-C-1

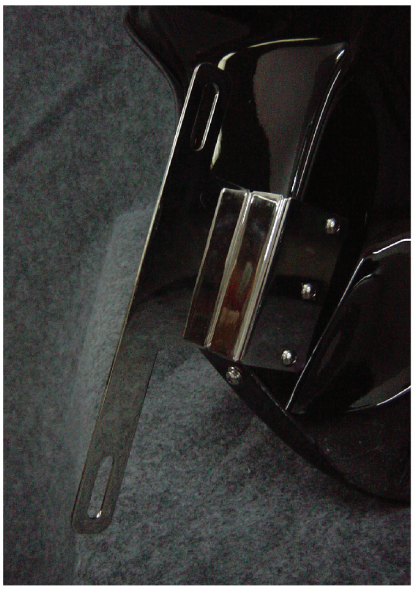

Fig. 2-C-2

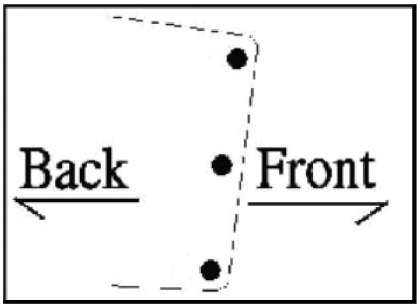

Fig. 2-C-3

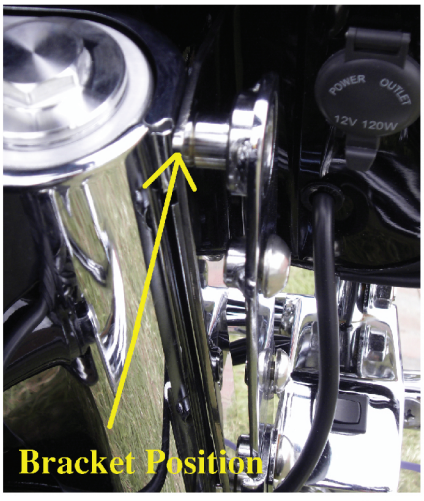

Fig. 2-C-4

Copyright © Tsukayu - All rights reserved